



We are incredibly grateful for your purchase of Chirpie, our Personal Safety Alarm! We are committed to creating safer communities for women, children and vulnerable individuals, and with your help, we are closer to accomplishing this mission.

When to use it

When you're in a situation that causes alarm and you need to alert those around you for assistance or to scare away potential assailants, Chirpie is the ideal answer. A few scenarios where this could be useful include:

1. If you suspect you are being followed while walking alone.
2. You spot a potentially unsafe situation nearby, for example a suspicious person approaching children, and want to draw attention and scare away the attacker.
3. You require immediate assistance but cannot reach people with your voice.

What it does


When activated, Chirpie will emit a loud alarm noise and the built-in light will start flashing, both of which will continue until deactivated.

How to use it

Please remove the insulating sheet before using Chirpie.

To activate Chirpie, simply pull out the pin. To stop the alarm, simply insert the pin back into the device.

Scan the QR code for instructional video

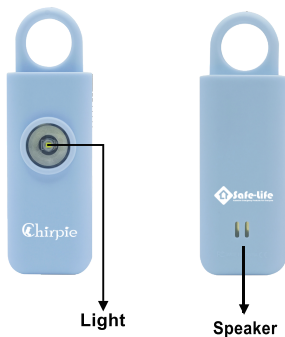

Battery Replacement

When the battery power is running low, the device will make a steady, continuous beeping sound - this means it is time to change the batteries.

To replace the batteries:

- 1) Remove the cover.
- 2) Rotate the pin to open the housing.
- 3) Remove old batteries.
- 4) Install 2 new CR2032 batteries.
- 5) Put the cover back on.

#StaySafeWithChirpie
P: 03 9588 0392
W: safelife.com.au
E: sales@safelife.com.au

Made in China

